
18” YARD LETTERS

ASSEMBLY HARDWARE

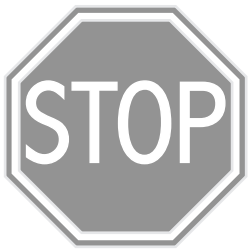

EMOJIS




Measure the bottom of your emoji to choose the appropriate stake.



< 6” Wide = Straight Stake **> 6” Wide = H-Stake**

STRAIGHT STAKE ASSEMBLY

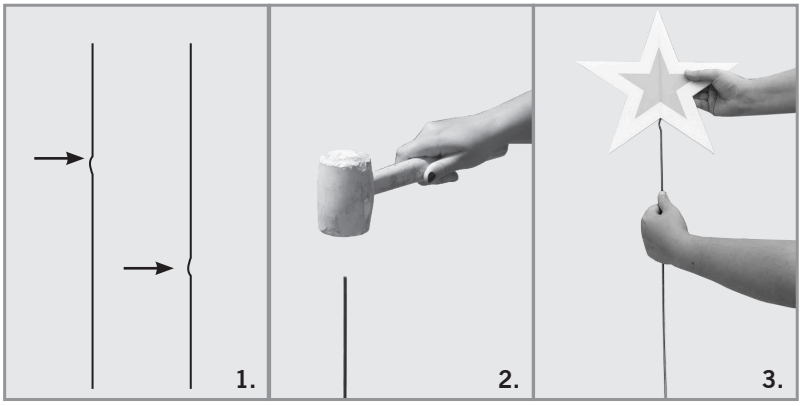


Note: Straight stakes have a notch on one end that should be inserted into the characters to prevent them from spinning in the wind.

1. **Position Stake Notch:** For shorter characters, point the notch up. For longer characters, point the notch down.

2. **Drive Stake into Ground:** Use a rubber mallet or hammer to gently tap the stake into the ground until secure.

3. **Mount Character:** Align the flutes at the bottom of the character with the top of the stake and slide down into place.

H-STAKE ASSEMBLY

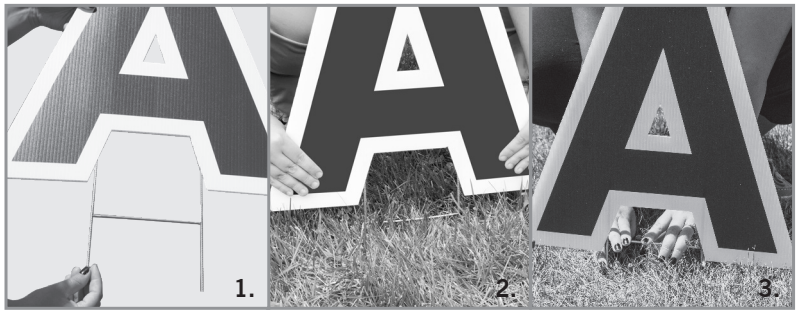

1. Insert the H-stake into the flutes on the bottom of the character.


2. Select the placement of the character.

3. Use your hands to push the H-stake into the ground until it is stable.


Occasionally, we may need to substitute stake types due to demand.
If you receive all straight stakes, then the letters that require an H-stake will receive 2 straight stakes instead.

24” YARD LETTERS

ASSEMBLY HARDWARE

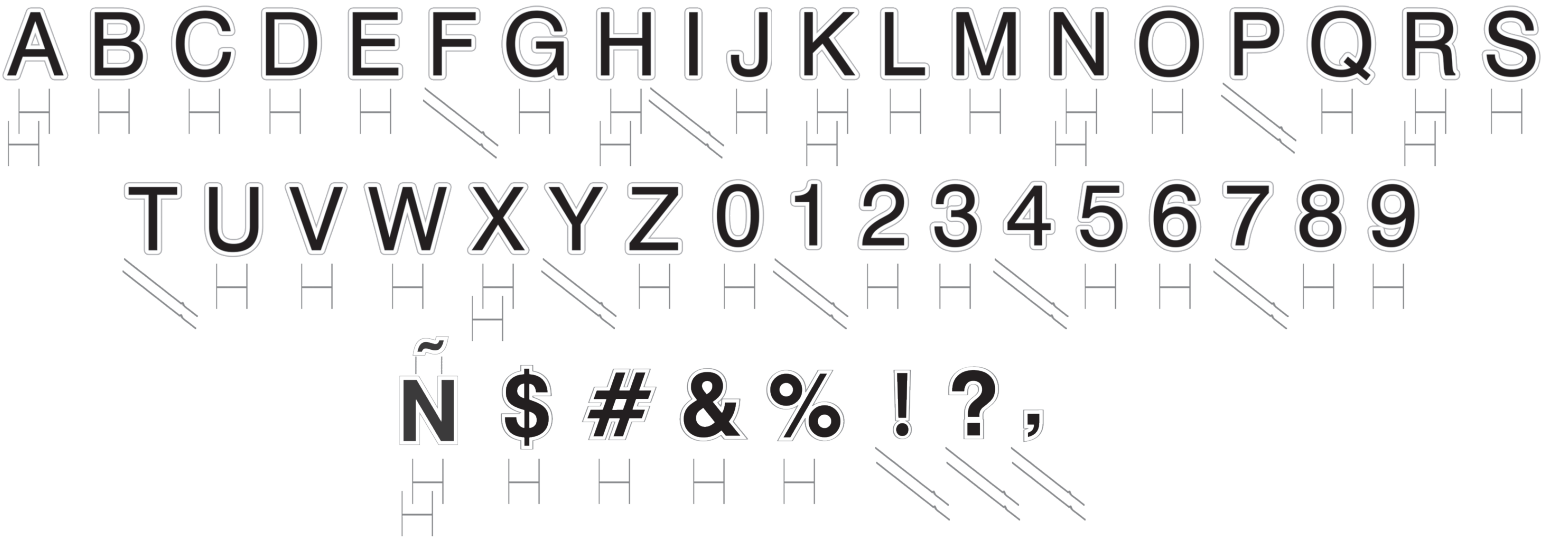

EMOJIS

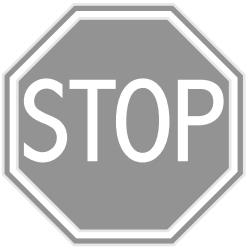


Measure the bottom of your emoji to choose the appropriate stake.



< 6” Wide = 2 Straight Stakes **> 6” Wide = 1 H-Stake**


STRAIGHT STAKE ASSEMBLY

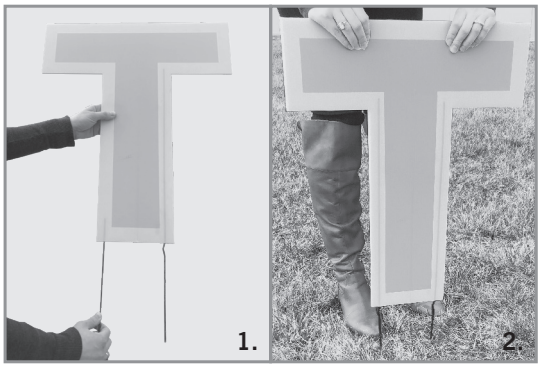

1. Insert the straight stakes into the flutes on bottom of the character.

2. Select the placement of the character and press it into the ground until it is stable.

H-STAKE ASSEMBLY

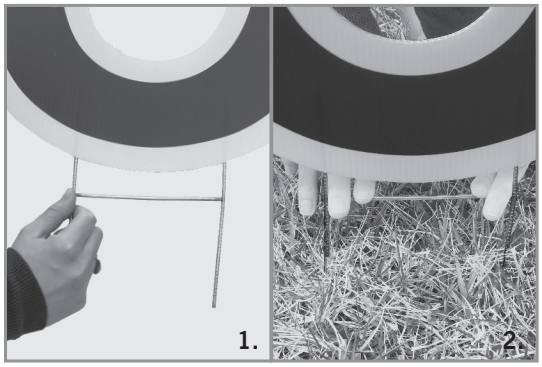

1. Insert the H-stake into the flutes on the bottom of the character.

2. Select the placement of the character and press it into the ground until it is stable.

Occasionally, we may need to substitute stake types due to demand.
If you receive all straight stakes, then the letters that require H-stakes will receive double straight stakes instead.